





































































 









 


 








Original	Recharge
 Standby	 Power
 CD	 3
 Tuner	 6
 Tape	 5
 AUX	 7
 Program	 TV/Radio /
 Tape A/B	 Smart / List
 Display/Clock	 Display / Media
 Vol-	 Vol-
 Vol+	 Vol+
 I< Preset	 I<< / Preset-
 Preset >I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Recharge
 Tape Rec	 Rec / Rec Mode
 USB Rec	 Shift + Rec / Rec Mode
 Snooze	 OK
 Inc.Surr.	 Subtitle / EQ
 DIM	 Shift + Mute / Dimmer
 Sleep/Timer	 Sleep / Timer
 Timer On/Off	 Shift + Sleep / Timer
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 USB	 8
 Mute	 Mute / Dimmer

































Original	Recharge
 Standby	 Power
 CD	 3
 Tuner	 6
 Tape	 5
 AUX	 7
 Repeat	 Green / APP / Repeat
 Program	 TV/Radio /
 Shuffle	 Blue / Prime Video / Random
 Tape A/B	 Smart / List
 Display/Clock	 Display / Media
 Vol-	 Vol-
 Vol+	 Vol+
 I< Preset	 I<< / Preset-
 Preset >I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Recharge
 <<	 << / Tune-
 >>	 >> / Tune+
 Tape Rec	 Rec / Rec Mode
 USB Rec	 Shift + Rec / Rec Mode
 Snooze	 OK
 Inc.Surr.	 Subtitle / EQ
 DIM	 Shift + Mute / Dimmer
 Sleep/Timer	 Sleep / Timer
 Timer On/Off	 Shift + Sleep / Timer
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 USB	 8
 Mute	 Mute / Dimmer
























Original	Recharge
 Standby	 Power
 CD	 3
 Tuner	 6
 Tape	 5
 AUX	 7
 Repeat	 Green / APP / Repeat
 Program	 TV/Radio /
 Tape A/B	 Smart / List
 Display/Clock	 Display / Media
 Vol-	 Vol-
 Vol+	 Vol+
 I< Preset	 I<< / Preset-
 Preset >I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-

Original	Recharge
 >>	 >> / Tune+
 Tape Rec	 Rec / Rec Mode
 USB Rec	 Shift + Rec / Rec Mode
 Snooze	 OK
 Inc.Surr.	 Subtitle / EQ
 DIM	 Shift + Mute / Dimmer
 Sleep/Timer	 Sleep / Timer
 Timer On/Off	 Shift + Sleep / Timer
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 USB	 8
 Mute	 Mute / Dimmer





Original	Rechange	Original	Rechange
Standby		Power	
Mute		Mute / Dimmer	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Tape Rec		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
I< Preset		I<< / Preset-	
Preset >I		>>I / Preset+	
Inc.Surr.		Subtitle / EQ	
Sleep/Timer		Sleep / Timer	
Program		TV/Radio /	
Bass+		Up	
USB Del USB		Shift + Smart / List	
Snooze		OK	
Bass-		Down	

Original	Rechange	Original	Rechange
Vol+		Vol+	
Tape A/B		Smart / List	
Treble+		CH+ / Page+	
Vol-		Vol-	
Display/Clock		Display / Media	
Treble-		CH- / Page-	
CD		3	
Tape		5	
Tuner		6	
AUX		7	
USB		8	
Repeat		Green / APP / Repeat	
Shuffle		Blue / Prime Video / Random	
DIM		Shift + Mute / Dimmer	
Play USB		Shift + Play /	
Pause USB		Shift + Pause / Step /	
Stop USB		Shift + Stop /	

Hold





Original	Recharge	
USB Rec	+	Shift + Rec / Rec Mode
<< USB	+	Shift + << /
>> USB	+	Shift + >> /
I< Preset USB	+	Shift + I<< / Preset-
Preset >I USB	+	Shift + >>I / Preset+
Timer On/Off	+	Shift + Sleep / Timer
Program USB	+	Shift + TV/Radio / Program
Display/Clock USB	+	Shift + Display / Media
Repeat USB	+	Shift + Green / APP /
Shuffle USB	+	Shift + Blue / Prime

Original	Recharge

