



Original	Rechange
Standby/On	Power
Smart Picture	Picture / Format
Eject	Eject / Surround
Child Lock	Zoom / Size
Monitor	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Turbo Timer	Smart / List
0	0
Timer	Sleep / Timer

Original	Rechange
Menu	Menu / Home
Up / P+	CH+ / Page+
Up / P+	Up
OK	OK
Left	Left
Right	Right
Vol+	Vol+
Down / P-	Down
Down / P-	CH- / Page-
TV+	Shift + CH+ /
Clear	Exit / Cancel / Clear
Select	Fav / Marker / PC
Vol-	Vol-
TV Power	Shift + Power
TV-	Shift + CH- /
Play	Play / Slow
<<	<< / Tune-





Original	Recharge	Original	Recharge
Stop	Stop / Hold		
>>	>> / Tune+		
>I / Index	Info / Angle		
Record/OTR	Rec / Rec Mode		
>I< / Still	Pause / Step / Freeze		

