













 



 


 













 































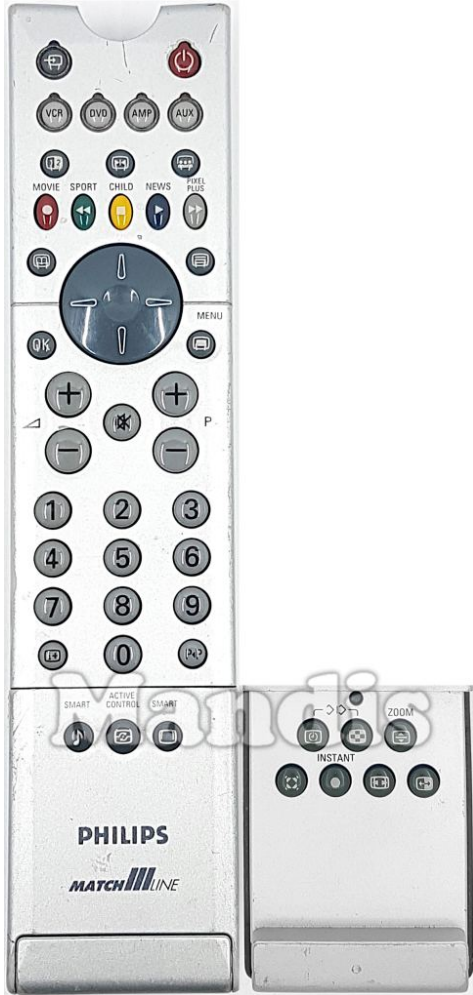












 


 





 


Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 AMP	 Shift + 5
 AUX	 Shift + 7
 [12]	 Picture / Format
 [> <]	 Shift + Zoom /
 [...]	 Subtitle / EQ
 Red/Rec/Movie	 Red / Netflix / Search
 Green/<</Sport	 Green / APP / Repeat
 Yellow/Stop/Child	 Yellow / YouTube / Repeat
 Blue/Play/News	 Blue / Prime Video / Random
 >>/Pixel Plus	 >> / Tune+
 Guide	 Guide / EPG / -/--
 Up	 Up
 [=]	 Text / Goto

 
Original	Rechange
 Left	 Left
 Right	 Right
 OK	 OK
 Down	 Down
 Menu	 Menu / Home
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7









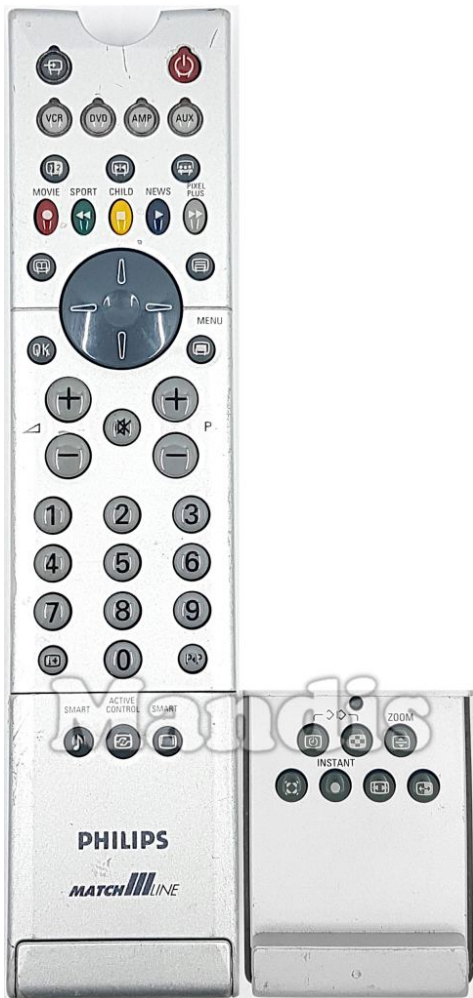






 


 



 














 




























	Original	Rechange	Original	Rechange
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P	 Fav / Marker / PC		
	♪ Smart	 Sound / Title		
	[-o-]/Active Control	 D.Menu / Top		
	[] Smart	 Smart / List		
	[o]	 TV/Radio /		
	Setup	 Setup / OPT /		
	[+]	 Display / Media		
	[♦]/Zoom	 Zoom / Size		
	[]	 Audio / Lang I/II		
	Instant	 Back / Return		
	[<>]	 Sleep / Timer		
	[↔]	 Eject / Surround		






Original	Recharge
	 AV / Input / RDS
	 Power
	 Shift + 4
	 Shift + 2
	 Shift + 5
	 Shift + 7
	 Zoom / Size
	 Subtitle / EQ
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 >> / Tune+
	 Guide / EPG / -/-
	 Up
	 Text / Goto
	 Left

Original	Recharge
	 Right
	 OK
	 Down
	 Menu / Home
	 Vol+
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8




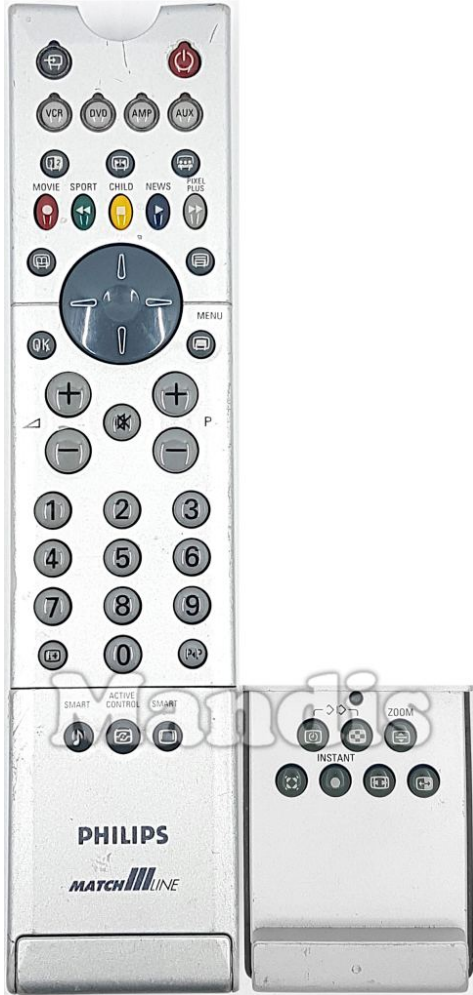

Original	Recharge
Input	AV / Input / RDS
Power	Power
VCR	Shift + 4
DVD	Shift + 2
AMP	Shift + 5
AUX	Shift + 7
[> <]	Zoom / Size
[...]	Subtitle / EQ
Red/Rec/Movie	Red / Netflix / Search
Green/Left/Sport	Green / APP / Repeat
Yellow/Stop/Child	Yellow / YouTube / Repeat
Blue/Play/News	Blue / Prime Video / Random
>>/Pixel Plus	>> / Tune+
Guide	Guide / EPG / -/--
Up	Up
[=]	Text / Goto
Left	Left

Original	Recharge
Right	Right
OK	OK
Down	Down
Menu	Menu / Home
Vol+	Vol+
P+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
P-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8



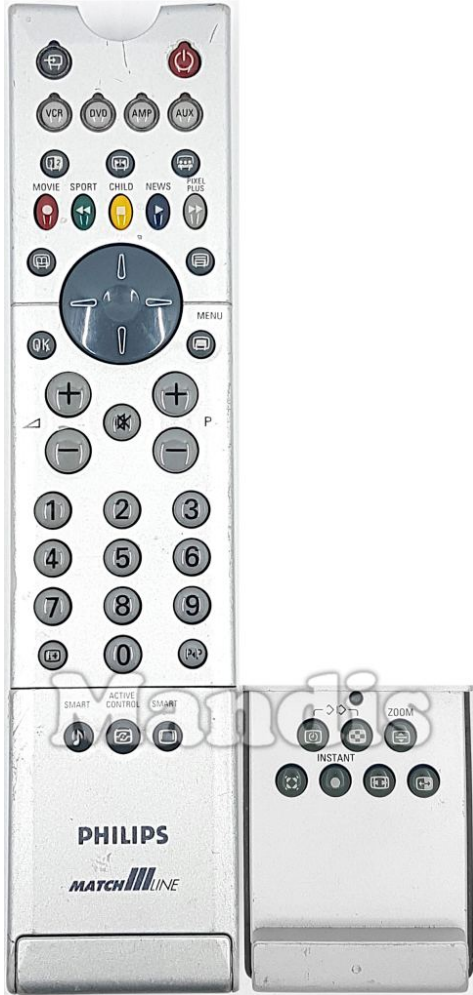

	Original	Recharge		Original	Recharge
	Input	AV / Input / RDS		Vol+	Vol+
	Power	Power		P+	CH+ / Page+
	VCR	Shift + 4		Vol-	Vol-
	DVD	Shift + 2		Mute	Mute / Dimmer
	AMP	Shift + 5		P-	CH- / Page-
	AUX	Shift + 7		1	1
	[...]	Subtitle / EQ		2	2
	Green/<</Sport	Green / APP / Repeat		3	3
	>>/Pixel Plus	>> / Tune+		4	4
	Guide	Guide / EPG / -/--		5	5
	Up	Up		6	6
	[=]	Text / Goto		7	7
	Left	Left		8	8
	Right	Right		9	9
	OK	OK		0	0
	Down	Down		P<P	Fav / Marker / PC
	Menu	Menu / Home			

