






Original	Rechange
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/-
	 Eject / Surround
	 Display / Media
	 AV / Input / RDS
	 TV/Radio /
	 Picture / Format
	 Menu / Home
	 Smart / List
	 Shift + Smart / List
	 Info / Angle

Original	Rechange
	 Up
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Setup / OPT /
	 Back / Return
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 Vol+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





Original		Rechange	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	[≡]/Text		Text / Goto

Original		Rechange	

