



Original	Recharge	Original	Recharge
Standby/on	Power	7	7
Open/close	Eject / Surround	8	8
CD	Shift + 3	9	9
USB	Shift + 8	Bass/Treble	Shift + Sound / Title
Tuner	Shift + 6	Clear	Exit / Cancel / Clear
Audio In	Audio / Lang I/II	0	0
BT Audio	Shift + 9	Repeat	Green / APP / Repeat
Clock/Timer	Shift + Sleep / Timer	Random	Blue / Prime Video / Random
Sleep	Sleep / Timer	Display	Display / Media
1	1	Up/Tune+	Up
2	2	Folder	Text / Goto
3	3	Left	Left
Equalizer	Setup / OPT /	Enter	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down/Tune-	Down
P.Bass	Sound / Title	Memory/Progra	TV/Radio /





	Original	Recharge	Original	Recharge
		Preset+		>> / Preset+
		Mute		Mute / Dimmer
		Vol+		Vol+
		Preset-		<< / Preset-
		Dimmer	+	Shift + Mute / Dimmer
		Vol-		Vol-
		<< <<		<< / Tune-
		Stop		Stop / Hold
		Play		Play / Slow
		Pause		Pause / Step / Freeze
		>> >>		>> / Tune+
		ST/Mono	+	Shift + Audio / Lang I/II
		RDS ASPM	+	Shift + Smart / List
		RDS PTY		Smart / List
		RDS Display	+	Shift + Display / Media

