



 






 

 

 

 

 

 





 

 

 





 



 


 






Original	Recharge
 Power	 Power
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 PC	 Shift + Fav / Marker / PC
 HMG	 Shift + 6
 [i+]/Timer/Info	 Sleep / Timer
 [i+]/Timer/Info	 Info / Angle
 []	 Shift + Red / Netflix /
 [←]	 Shift + Yellow / YouTube /
 [↔]	 Shift + Green / APP /
 CTRL HDMI	 Picture / Format
 1	 1
 2	 2
 3	 3

Original	Recharge
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-
 0	 0
 TV/DTV/SAT	 AV / Input / RDS
 P+	 CH+ / Page+
 CH return	 Fav / Marker / PC
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Exit	 Exit / Cancel / Clear







 

 

 

 
 





 

 

 

 

 









Original	Recharge
	
Up	Up
	
Tools	Setup / OPT /
	
Left	Left
	
Enter	OK
	
Right	Right
	
Home	Menu / Home
	
Down	Down
	
Return	Back / Return
	
Red	Red / Netflix / Search
	
Rec	Rec / Rec Mode
	
Green	Green / APP / Repeat
	
Pause	Pause / Step / Freeze
	
Yellow	Yellow / YouTube / Repeat
	
Stop	Stop / Hold
	
Blue	Blue / Prime Video / Random
	
Play	Play / Slow
	
I<<	I<< / Preset-

Original	Recharge
	
[...]	Subtitle / EQ
	
>>	>> / Preset+
	
[≡?]	Shift + Display / Media
	
<<	<< / Tune-
	
[≡i]	Shift + Smart / List
	
>>	>> / Tune+
	
[≡]	Text / Goto
	
I-II	Audio / Lang I/II
	
[-]DVD/[+]	Smart / List
	
[<>]/HDD	Display / Media



 

 



 





 

 

 



 



 



 

 

 

 

 



 



 





 

 





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 0	 0
 Vol+ Tv	 Vol+
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Up	 Up

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+







 

 















 







 

 














Original		Rechange		Original		Rechange	
	Power		Power		P-		CH- / Page-
	[i+]/Timer/Info		Info / Angle		Mute Tv		Mute / Dimmer
	[i+]/Timer/Info		Sleep / Timer		Vol- Tv		Vol-
	1		1		X/Exit		Exit / Cancel / Clear
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Menu/Home		Menu / Home
	7		7		Down		Down
	8		8		Return		Back / Return
	9		9				
	EPG/DVD Top Menu/Guide		Guide / EPG / -/-				
	EPG/DVD Top Menu/Guide		D.Menu / Top				
	0		0				
	P+		CH+ / Page+				
	Vol+ Tv		Vol+				





Original	Rechange	Original	Rechange
 Power	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Stop	 Stop / Hold
 2	 2	 Play	 Play / Slow
 3	 3	 I<<	 I<< / Preset-
 4	 4	 >>I	 >>I / Preset+
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 P+	 CH+ / Page+		
 Vol+ Tv	 Vol+		
 P-	 CH- / Page-		
 Mute Tv	 Mute / Dimmer		
 Vol- Tv	 Vol-		
 Rec	 Rec / Rec Mode		

Original	Rechange
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

