



Original	Rechange
Power On/Off	Power
Display	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH Enter	Pre Ch
P/CH+	Ch +
P/CH-	Ch -
Muting	Mute

Original	Rechange
I-II MTS	Dual
Vol+	Vol +
Vol-	Vol -
Integrator	Smart
Home	Menu
Exit	Exit
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter/Set	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
PC	Media





Original	Recharge
Input	AV
Ext Input	Shift + AV
TV	TV/R
Split	Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No. SET -	Shift + TV/R
Clear +	Shift + Exit
Power Control	Shift + Power
AV Selection	List
Power Off	Shift + Media
Power On	Shift + Smart

Original	Recharge
Zoom/Point	Eject
Zoom-	Shift + Ch -
Zoom+	Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8





Original	Recharge
Power On/Off	Power
Display	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH Enter	Pre Ch
.	Guide
P/CH+	Ch +
P/CH-	Ch -
Muting	Mute

Original	Recharge
I-II MTS	Dual
Vol+	Vol +
Vol-	Vol -
Integrator	Smart
Home	Menu
Exit	Exit
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter/Set	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
PC	Media





Original	Recharge
INPUT	TIMER AV
Ext Input	SHIFT + TIMER AV
TV	SEARCH TV/R
Split	SHIFT + ECO 3D
Sub Input	AD SUBT
Swap	PROG SLEEP
(PIP) Shift	ECO 3D
Drive Off	SHIFT + SETTINGS OPT
Factory	E-MANUAL D.MENU
2nd Factory	REPEAT TEXT
Set Up/Auto	SETTINGS OPT
ID No.Set -	SHIFT + SEARCH TV/R
Clear +	SHIFT + CLEAR EXIT
Control Power	SHIFT + POWER
AV Selection	DISC NAV LIST
Power Off	SHIFT + APP MEDIA
Power On	SHIFT + HOME SMART

Original	Recharge
Zoom-	SHIFT + CH -
Zoom/Point	ZOOM
Zoom+	SHIFT + + CH
Freeze	
Size/Screen	PICTURE FORMAT
Input 1	SHIFT + 1
Input 2	SHIFT + 2
Input 3	SHIFT + 3
Input 4	SHIFT + 4
Input 5	SHIFT + 5
Input 6	SHIFT + 6
Input 7	SHIFT + 7
Input 8	SHIFT + 8

