











 



 







 



 



 


















 






Original	Recharge	Original	Recharge
 Volume-	 Vol-	 Mode	 Picture / Format
 Volume+	 Vol+	 Best	 Text / Goto
 Power	 Power	 Previous	 Fav / Marker / PC
 F	 AV / Input / RDS	 Hi-Lite	 Setup / OPT /
 Disp	 Display / Media	 CD II >	 3
 Sleep	 Sleep / Timer	 Station-	 Down
 AUX/CD II	 7	 Station+	 Up
 PGM	 D.Menu / Top	 Mono	 Audio / Lang I/II
 Clear	 Exit / Cancel / Clear	 FM/AM	 TV/Radio /
 Repeat	 Green / APP / Repeat	 << Tape	 << / Tune-
 Random	 Blue / Prime Video / Random	 >> Tape	 >> / Tune+
 I<< CD	 I<< / Preset-	 Stop Tape	 Shift + Stop /
 >>I CD	 >>I / Preset+	 <> Tape	 Pause / Step / Freeze
 Stop CD	 Stop / Hold		
 Play/Pause CD	 Play / Slow		
 - Disc	 CH- / Page-		
 Disc+	 CH+ / Page+		

Original	Recharge	Original	Recharge
 Mode	 Picture / Format	 Power	 DIMMER MUTE
 Best	 Text / Goto	 TV	 DVD
 Previous	 Fav / Marker / PC	 SAT	 AUX
 Hi-Lite	 Setup / OPT /	 SLOW	 STEP - FREEZE
 CD II >	 3	 HOLD	 REC MODE
 Station-	 Down	 TUNE-	 PRESET-
 Station+	 Up	 TUNE+	 PRESET+
 Mono	 Audio / Lang I/II	 TITLE	 LANG I/II
 FM/AM	 TV/Radio /	 EQ	 SURROUND
 << Tape	 << / Tune-	 SUBTITLE	 PROGRAM
 >> Tape	 >> / Tune+	 FORMAT	 SIZE
 Stop Tape	 Shift + Stop /	 PICTURE	 ZOOM
 <> Tape	 Pause / Step / Freeze	 TOP MENU	 OPT-TOOLS
		 GOTO	 TEXT
		 D.MENU	 SETUP
		 HOME	 ANGLE
		 MENU	 INFO
		 CLEAR	 RETURN
		 EXIT	 BACK
		 CANCEL	 LIST
		 VOL +	 SMART
		 VOL -	 MEDIA
		 TV	 DISPLAY
		 DVD	 CH PAGE +
		 CD - STB	 CH PAGE -
		 VIDEO	 TAPE
		TUNER	TUNER
		AUX - HDD	USB
		BLUETOOTH	PC
		GUIDE EPG	FAV MARKER
		NETFLIX	APP
		YouTube	Prime Video
		SEARCH	REPEAT
		REPEAT A-B	RANDOM

