









 
 






 

 

 









 





 









 





Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Input 1		Shift + 1		5		5
	Input 2		Shift + 2		6		6
	Input 3		Shift + 3		7		7
	Input 4		Shift + 4		8		8
	Input 5		Shift + 5		9		9
	PC		Fav / Marker / PC		0		0
	[i+]/Timer/Info		Info / Angle		P+		CH+ / Page+
	[i+]/Timer/Info		Sleep / Timer		Vol+		Vol+
	CTRL HDMI		Shift + 0		P-		CH- / Page-
	[]		Picture / Format		Mute		Mute / Dimmer
	[↔]		Shift + Picture / Format		Vol-		Vol-
	[←]		AV / Input / RDS		Exit		Exit / Cancel / Clear
	TV/DTV		TV/Radio /		Up		Up
	1		1		EPG/DVD Top Menu/Guide		D.Menu / Top
	2		2		EPG/DVD Top Menu/Guide		Guide / EPG / -/--
	3		3		Left		Left







 

 






 







Original	Rechange	Original	Rechange
	Enter		OK
	Right		Right
	Home		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Yellow		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	I<<		I<< / Preset-
	[...]		Subtitle / EQ
	>>I		>>I / Preset+
	[≡?]		Sound / Title
	<<		<< / Tune-
	[≡i]		Zoom / Size
	>>		>> / Tune+
	[≡]		Text / Goto
	Tools		Setup / OPT /
	I-II		Audio / Lang I/II
	[-]DVD/[≡+]		Smart / List
	[<>]/HDD		Display / Media

















 

 

 



 













Original	Rechange
 Power	 Power
 [i+]/Timer/Info	 Info / Angle
 [i+]/Timer/Info	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P+	 CH+ / Page+
 Vol+ Tv	 Vol+
 P-	 CH- / Page-
 Mute Tv	 Mute / Dimmer

Original	Rechange
 Vol- Tv	 Vol-
 X/Exit	 Exit / Cancel / Clear
 Up	 Up
 EPG / Guide	 Guide / EPG / -/--
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu / Home	 Menu / Home
 Down	 Down
 Return	 Back / Return





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+ Tv	 Vol+
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Up	 Up
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/-

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+



