



	Original	Rechange		Original	Rechange
	Power Receiver	Power		3 Tuner	Shift + 3
	DVD	2		HDMI Out	AV / Input / RDS
	BD	1		4 Tuner	Shift + 4
	DVR	5		Signal Sel	Shift + Setup / OPT / Tools
	HDMI	0		MCACC	Fav / Marker / PC
	TV	TV/Radio /		5 Tuner	Shift + 5
	CD	3		6 Tuner	Shift + 6
	CD-R	9		Sleep	Sleep / Timer
	Home Media	Shift + Menu /		7 Tuner	Shift + 7
	iPod / USB	8		SBch	Eject / Surround
	Tuner	6		8 Tuner	Shift + 8
	Video 1	4		A.ATT.	Yellow / YouTube / Repeat
	Video 2	7		9 Tuner	Shift + 9
	↶ Input Select	Shift + Left		Dimmer	Shift + Mute / Dimmer
	1 Tuner	Shift + 1		D.Access	Shift + D.Menu / Top Menu
	Input Select ↷	Shift + Right		CH Level	Shift + CH+ /
	2 Tuner	Shift + 2		0 Tuner	Shift + 0





Original	Recharge
Class	Shift + Display / Media
Enter (Class)	Shift + OK
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + << / Preset-
Enter	OK
Preset +	Shift + >> / Preset+

Original	Recharge
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down
Return	Back / Return
Auto / Alc / Direct	Info / Angle
Stereo	Sound / Title
Repeat	Green / APP / Repeat
Standard	Shift + Smart / List
Random	Blue / Prime Video / Random
Adv. Surr.	Guide / EPG / -/-
<<	<< / Tune-
Phase CTRL	Red / Netflix / Search
Play	Play / Slow
>>	>> / Tune+
Status	Exit / Cancel / Clear





Original		Rechange		Original	Rechange
	I<<		I<< / Preset-		
	Pause		Pause / Step / Freeze		
	MPX		Zoom / Size		
	PQLS		Shift + Info / Angle		
	Stop		Stop / Hold		
	>>I		>>I / Preset+		
	Audio DVD		Shift + Audio / Lang I/II		
	Disp		Display / Media		
	CH -		CH- / Page-		
	CH +		CH+ / Page+		





Original	Recharge
Power Source	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK

Original	Recharge
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II





Original	Recharge
Power Source	Power
Tuner	Shift + 6
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
D.Access	D.Menu / Top
0	0
Class	CH- / Page-
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Original	Recharge
Band	Smart / List
Tune+	>> / Tune+
Tune+	Up
T.Edit	Text / Goto
Preset-	Left
Preset-	I<< / Preset-
Enter	OK
Preset+	>>I / Preset+
Preset+	Right
Search	Red / Netflix / Search
Tune-	<< / Tune-
Tune-	Down
Menu	Menu / Home
MPX	CH+ / Page+
Disp	Display / Media

