



Original	Rechange
Standby / On	Power
Sleep	Sleep
Dimmer	Blue
ECO	3D
BD	1
GAME	2
DVR / BDR	3
DVD	4
SAT / CBL	5
HDMI	6
MHL	Shift + 6
iPod / USB	7
CD	8
ADPTER	9
TUNER	Guide
TV	0
NETWORK	Pre Ch

Original	Rechange
i / Status	Info
Speakers	List
PHASE	Shift + 3D
Signal Sel.	AV
Auto / Direct	TV/R
Standard	Format
Adv. Surr.	Subt
Mute	Mute
Tools Menu	Options
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Home Menu	Menu
iPod Ctrl.	D. Menu
Return	Back





Original		Rechange		Original		Rechange	
	Volume+		Vol +		Random		Text
	Volume-		Vol -		Disp		Shift + Info
	Pause		Pause		Audio		Dual
	BAND		Shift + Play		SB CH		Media
	Play		Play		CH Level CH Sel		Smart
	PTY		Shift + Stop		CH Level-		Ch -
	Stop		Stop		CH Level+		Ch +
	+Fav		Shift + Pre Ch		Bass-		Shift + Down
	Preset -		Shift + I<<		Bass+		Shift + Up
	I<<		I<<		Treble-		Shift + Left
	Preset+		Shift + >>I		Treble+		Shift + Right
	>>I		>>I				
	Tune-		Shift + <<				
	<<		<<				
	Tune+		Shift + >>				
	>>		>>				
	Repeat		Shift + Text				

