



Original		Rechange		Original		Rechange	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Original	Rechange
5 Tv	+ Shift + 5
6 Tv	+ Shift + 6
7 Tv	+ Shift + 7
9 Tv	+ Shift + 9
8 Tv	+ Shift + 8
0 Tv	+ Shift + 0
+10 Tv	+ Shift + Guide / EPG / -/-
Menu Tv	+ Shift + Menu /
Tv Input	+ Shift + AV / Input / RDS
Tv Vol+	+ Shift + Vol+
Tv Vol-	+ Shift + Vol-
Channel + Tv	+ Shift + CH+ /
Channel - Tv	+ Shift + CH- /
Up Tv	+ Shift + Up
Down Tv	+ Shift + Down
Enter Tv	+ Shift + OK
Right Tv	+ Shift + Right

Original	Rechange
Left Tv	+ Shift + Left
Pause/T.Edit Tv	+ Shift + Pause / Step /
Play/D.Access Tv	+ Shift + Play /
Stop/MPX Tv	+ Shift + Stop /
>>I/RF ATT Tv	+ Shift + >>I / Preset+
I<</Display Tv	+ Shift + I<< / Preset-
>>/Class Tv	+ Shift + >> /
<</Band Tv	+ Shift + << /
Rec Tv	+ Shift + Rec / Rec Mode
Disc Tv	+ Shift + Fav / Marker / PC





Original	Rechange
Power DVD	Power
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Top Menu	D.Menu / Top
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Disc DVD	Fav / Marker / PC

Original	Rechange
Menu DVD	Menu / Home
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold





 






 



 

 



 



 











Original	Rechange
>>I DVD	>>I / Preset+
I<< DVD	I<< / Preset-
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Fav / Marker / PC
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up

Original	Rechange
Down VCR	Shift + Down
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode












 




Original	Rechange
 Power CD	 Power
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0
 +10 CD	 Guide / EPG / -/--
 Disc CD	 Fav / Marker / PC
 Master	 Vol+
 Master Volume-	 Vol-
 Mute	 Mute / Dimmer
 Channel+ CD	 CH+ / Page+

Original	Rechange
 Channel- CD	 CH- / Page-
 Up CD	 Up
 Down CD	 Down
 Right CD	 Right
 Left CD	 Left
 Enter CD	 OK
 Pause CD	 Pause / Step / Freeze
 Play CD	 Play / Slow
 << CD	 << / Tune-
 >> CD	 >> / Tune+
 Stop CD	 Stop / Hold
 I<< CD	 I<< / Preset-
 >>I CD	 >>I / Preset+
 Power TVC	 Shift + Power
 1 TVC	 Shift + 1
 2 TVC	 Shift + 2
 3 TVC	 Shift + 3



 

 

 

 

 

 

 

 

 





 

 

















 






 
 

 



 
 
 
 
 
 

 

 



Original	Recharge
 4 TVC	 Shift + 4
 5 TVC	 Shift + 5
 6 TVC	 Shift + 6
 7 TVC	 Shift + 7
 8 TVC	 Shift + 8
 9 TVC	 Shift + 9
 0 TVC	 Shift + 0
 +10 TVC	 Shift + Guide / EPG / --
 Disc TVC	 Shift + Fav / Marker / PC
 Menu TVC	 Shift + Menu /
 Up TVC	 Shift + Up
 Down TVC	 Shift + Down
 Right TVC	 Shift + Right
 Left TVC	 Shift + Left
 Enter TVC	 Shift + OK
 Pause TVC	 Shift + Pause / Step /
 Rec TVC	 Shift + Rec / Rec Mode

Original	Recharge
 Play TVC	 Shift + Play /
 Stop TVC	 Shift + Stop /
 << TVC	 Shift + << /
 >> TVC	 Shift + >> /
 >>I TVC	 Shift + >>I / Preset+
 I<< TVC	 Shift + I<< / Preset-



 































Original	Rechange
 Power TUN	 Power
 1 TUN	 1
 2 TUN	 2
 3 TUN	 3
 4 TUN	 4
 5 TUN	 5
 6 TUN	 6
 7 TUN	 7
 8 TUN	 8
 9 TUN	 9
 0 TUN	 0
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer
 TUNE+ TUN	 >> / Tune+
 TUNE- TUN	 << / Tune-
 ST+ TUN	 >>I / Preset+

Original	Rechange
 ST- TUN	 I<< / Preset-
 D.Access TUN	 Play / Slow
 Band TUN	 Pause / Step / Freeze
 Class TUN	 Stop / Hold
 MPX TUN	 Rec / Rec Mode
 Display TUN	 Display / Media
 RF ATT TUN	 Smart / List
 Power CDR	 Shift + Power
 1 CDR	 Shift + 1
 2 CDR	 Shift + 2
 3 CDR	 Shift + 3
 4 CDR	 Shift + 4
 5 CDR	 Shift + 5
 6 CDR	 Shift + 6
 7 CDR	 Shift + 7
 8 CDR	 Shift + 8
 9 CDR	 Shift + 9





	Original	Rechange	
	0 CDR	 +  0	Shift + 0
	+10 CDR	 + 	Shift + Guide / EPG / -/-
	Channel+ CDR	 + 	Shift + CH+ /
	Channel- CDR	 + 	Shift + CH- /
	Up CDR	 + 	Shift + Up
	Down CDR	 + 	Shift + Down
	Right CDR	 + 	Shift + Right
	Left CDR	 + 	Shift + Left
	Enter CDR	 + 	Shift + OK
	Pause CDR	 + 	Shift + Pause / Step /
	Play CDR	 + 	Shift + Play /
	Stop CDR	 + 	Shift + Stop /
	<< CDR	 + 	Shift + << /
	Rec CDR	 + 	Shift + Rec / Rec Mode
	>> CDR	 + 	Shift + >> /
	I<< CDR	 + 	Shift + I<< / Preset-
	>>I CDR	 + 	Shift + >>I / Preset+

Original	Rechange

