







































 



















| Original | Recharge | Original | Recharge |
|--------------|---------------------------------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------|
| On/Off |  Power | TV/AV |  AV / Input / RDS |
| Mute |  Mute / Dimmer | Menu |  Menu / Home |
| Still |  Pause / Step / Freeze | Menu Up |  Up |
| Txt Stop |  Stop / Hold | Info |  Info / Angle |
| Tune- |  << / Tune- | Menu Left |  Left |
| Tune+ |  >> / Tune+ | OK Enter |  OK |
| Tone- |  I<< / Preset- | Menu Right |  Right |
| Tone+ |  >>I / Preset+ | Back |  Exit / Cancel / Clear |
| Menu audio |  Audio / Lang I/II | Menu Down |  Down |
| Subt.List |  Subtitle / EQ | Swap |  Back / Return |
| Bright+ Mode |  Picture / Format | Volume+ |  Vol+ |
| Txt Expand |  Zoom / Size | View |  Smart / List |
| Sleep Timer |  Sleep / Timer | Chan.Up |  CH+ / Page+ |
| Return TV |  TV/Radio / | Volume- |  Vol- |
| Update |  D.Menu / Top | Display |  Display / Media |
| Help |  Setup / OPT / | Chan.Down |  CH- / Page- |
| Text |  Text / Goto | 1 |  1 |



| Original | Recharge | |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| 2 |  2 | 2 |
| 3 |  3 | 3 |
| 4 |  4 | 4 |
| 5 |  5 | 5 |
| 6 |  6 | 6 |
| 7 |  7 | 7 |
| 8 |  8 | 8 |
| 9 |  9 | 9 |
| Guide -/-- 1. |  Guide / EPG / -/-- | |
| 0/10 |  0 | 0 |
| 2.Fav P/C 2. |  Fav / Marker / PC | |
| Red |  Red / Netflix / Search | |
| Green |  Green / APP / Repeat | |
| Yellow |  Yellow / YouTube / Repeat | |
| Blue |  Blue / Prime Video / Random | |
| On/Off |  +  Shift + Power | |
| Mix Scan |  +  Shift + Text / Goto | |

Goto

| Original | Recharge | |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| AV 2 |  +  Shift + AV / Input / RDS | |
| Audio+ |  +  Shift + Vol+ | |
| Audio- |  +  Shift + Vol- | |
| Disp |  +  Shift + Display / Media | |
| On Pip |  +  Shift + 1 | |
| Dim Pip |  +  Shift + 2 | |
| Rotate Pip |  +  Shift + 3 | |
| Search |  +  Shift + Red / Netflix / | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

