



Original	Rechange
PWR	Power
TV/Rad	TV/Radio /
TV/STB	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Back	Back / Return
0	0
Mute	Mute / Dimmer
Red	Red / Netflix / Search
OPT	Setup / OPT /

Original	Rechange
Green	Green / APP / Repeat
A/V+	AV / Input / RDS
Yellow / FAV	Yellow / YouTube / Repeat
FAV	Fav / Marker / PC
Blue / A-Z	Blue / Prime Video / Random
Blue / A-Z	Shift + Blue / Prime
Menu	Menu / Home
EPG	Guide / EPG / -/-
Info	Info / Angle
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Vol+	Vol+
Exit	Exit / Cancel / Clear
PR/CH+	CH+ / Page+






























 

 







 



Original	Recharge	Original	Recharge
	Vol-		Vol-
	PR/CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	l>/Slow	+	Shift + Play /
	[:=]/List		Smart / List
	A-B	+	Shift + Yellow / YouTube /
	Mark	+	Shift + Fav / Marker / PC
	Jump		Text / Goto
	PIP	+	Shift + OK
	Swap	+	Shift + Left
	Move	+	Shift + Right
	Sleep		Sleep / Timer























Original	Recharge	
PWR On/Off		Power
East		D.Menu / Top
TV	 +  Shift + 1	
Dec/Pause		Pause / Step / Freeze
Alt/16:9		Picture / Format
H/V Play		Play / Slow
Opt?		Setup / OPT /
FAV Pref.		Fav / Marker / PC
4ghi		4
Guide Pilote	 +  Shift + Guide / EPG / -/-	
9wxyz		9
8tuv		8
7pqrm		7
6mno		6
3def		3
5jkl		5
2abc		2

Original	Recharge	
1. ?		1
Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
LNB F.Forward		>> / Tune+
Lang./Rewind		<< / Tune-
TV/SAT		AV / Input / RDS
West		>>I / Preset+
Dev		I<<< / Preset-
0/10		0
Video	 +  Shift + 4	
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Blue		Blue / Prime Video / Random
Freeze	 +  Shift + Pause / Step /	
Menu Up		Up
Mute		Mute / Dimmer
Epg		Guide / EPG / -/-
App	 +  Shift + Green / APP / Repeat	





Original	Rechange	
Info		Info / Angle
Subt.List		Subtitle / EQ
Sleep Timer		Sleep / Timer
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II

Original	Rechange	
CH/Page-		CH- / Page-

