






Original	Rechange
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Guide	 Guide / EPG / -/--
 3D	 Eject / Surround
 Ambilight	 Display / Media
 Source	 AV / Input / RDS
 TV	 TV/Radio /
 [<>]/Format	 Picture / Format
 Home	 Menu / Home
 Smart Tv	 Smart / List
 ≡/List	 Shift + Smart / List
 [i]/Info	 Info / Angle

Original	Rechange
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Ill/Options	 Setup / OPT /
 Back	 Back / Return
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original		Rechange	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	[≡]/Text		Text / Goto

Original		Rechange	

