



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause/[≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
 <</[≡i]	 << / Preset-
 >> /[≡?]	 >> / Preset+
 >>/[≡x]	 >> / Tune+
 Info	 Info / Angle
 OI/II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Original	Rechange
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 Up	 Up
 [→]	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+





Original		Rechange		Original		Rechange	
	Home / Source		Menu / Home				
	P+		CH+ / Page+				
	Vol-		Vol-				
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / -/--				
	List		Smart / List				
	Q.Menu		D.Menu / Top				





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause [/≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
 <</[≡i]	 << / Preset-
 >> /[≡?]	 >> / Preset+
 >>/[≡x]	 >> / Tune+
 Info	 Info / Angle
 O) /II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Original	Rechange
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 [→]	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Netflix /
 YouTube	 Shift + YouTube /
 Vol+	 Vol+





Original		Rechange	
	Home/Source		Menu / Home
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	List		Smart / List
	Q.Menu		D.Menu / Top

Original		Rechange	

