








 




 
 

 





 



 



 



 





 







 

 

 


















Original		Rechange		Original		Rechange	
	Power		Power		3		3
	Mute		Mute		4		4
	Play		Play		5		5
	[=]		Text		6		6
	Pause/[/≡]		Pause		7		7
	Stop/[≡+]		Stop		8		8
	Rec/[≡◇]		Rec		9		9
	<</[≡o]		<<		0		0
	l<</[≡i]		l<<		Menu		Menu
	>> /[≡?]		>>		Exit		Exit
	>>/[≡x]		>>		Up		Up
	Info		Info		Left		Left
	EPG		Guide		OK		Ok
	Subtitle		Subt		Right		Right
	Audio		Dual		Down		Down
	1		1		Back		Back
	2		2		Home/Source		Smart





Original		Rechange		Original		Rechange	
SOURCE	Home/Source	TIMER AV	AV				
VOL+	Vol+	+ VOL	Vol +				
VOL-	Vol-	VOL -	Vol -				
LIST	List	DISC NAV LIST	List				
CH+	P+	+ CH	Ch +				
CH-	P-	CH -	Ch -				
	Red	A	Red				
	Green	B	Green				
	Yellow	C	Yellow				
	Blue	D	Blue				
ZOOM	Zoom	ZOOM ▲	Eject				
REC.LIST	Rec.List	SEARCH TV/R	TV/R				
FAV	FAV	FAV PRE-CH	Pre Ch				

