
 






 




















 

 

 


 



 

 








 







Original	Rechange
 Power	 Power
 Tv	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV CH	 Fav / Marker / PC
 0	 0
 PRE CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 Source	 AV / Input / RDS
 PR-	 CH- / Page-
 Info	 Info / Angle
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Return	 Shift + Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 CH LIST	 Smart / List
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Recharge		Original	Recharge
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	TTX/MIX		Text / Goto		
	Media P		Display / Media		
	P SIZE		Zoom / Size		
	Dual		Audio / Lang I/II		
	AD		Eject / Surround		
	SUBT		Subtitle / EQ		
	<<		<< / Tune-		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	Stop		Stop / Hold		

