 



 



 
 


 
 



 


 
 









 

 



 



 


 



 




 


 















Original	Rechange	Original	Rechange
 Power	 Power	 DTV	 TV/R
 Source	 AV	 Vol+	 Vol +
 Subt.	 Subt	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 PR+	 Ch +
 3	 3	 PR-	 Ch -
 4	 4	 CH.List	 List
 5	 5	 Menu	 Menu
 6	 6	 Media.P	 Media
 7	 7	 Guide	 Guide
 8	 8	 Tools	 Options
 9	 9	 Info	 Info
 0	 0	 Up	 Up
 -/--	 Shift + Guide	 Down	 Down
 PRE-CH	 Pre Ch	 Right	 Right
 TTX/MIX	 Text	 Left	 Left
 HDMI	 Smart	 Enter	 Ok



