 

 

 
 
 
 

 
 
 





 

 

 
 

 


 
 





 







 











Original	Rechange
 Power	 Power
 Source	 AV
 Subt.	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 PRE-CH	 Pre Ch
 TTX/MIX	 Text
 HDMI	 Smart

Original	Rechange
 DTV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH.List	 List
 Menu	 Menu
 Media.P	 Media
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Original	Recharge	Original	Recharge
 Return	 Back	 Pause	 Pause
 Exit	 Exit	 >>	 >>
 Red/A	 Red		
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 PIP	 3D		
 PIP Down	 I<<		
 PIP Up	 >>I		
 P.Mode	 Shift + Format		
 SRS	 Dual		
 P.Size	 Format		
 Still	 D. Menu		
 Rec	 Rec		
 Stop	 Stop		
 <<	 <<		
 Play	 Play		

