
 










Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Back / Return
 VOL+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Rechange
 VOL-	 Vol-
 CH.LIST	 Display / Media
 CH.LIST	 Shift + Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Smart HUB	 Smart / List
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search





Original	Recharge
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 E-Manual	 D.Menu / Top
 3D	 Picture / Format
 AD/Subt	 Subtitle / EQ
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 >>	 >> / Preset+

Original	Recharge

