

 






 
 



 

 
 
 
 

 
 


 
 



 







Original	Rechange
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Rechange
 PR+	 Ch +
 PR-	 Ch -
 CH List	 List
 Content	 Smart
 Menu	 Menu
 Guide	 Guide
 Info	 Info
 Tools	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Exit	 Exit
 Red/A	 Red
 Green/B	 Green



