




























Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		PR-		CH- / Page-
	2		2		CH List		Smart / List
	3		3		Menu		Menu / Home
	4		4		FAV CH		Fav / Marker / PC
	5		5		Tools		Setup / OPT /
	6		6		Return		Shift + Back / Return
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	[ ]		Display / Media		Right		Right
	0		0		Info		Info / Angle
	PRE-CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	PR+		CH+ / Page+		Green		Green / APP / Repeat





Original		Recharge		Original		Recharge	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	TTX/MIX		Text / Goto				
	SRS		Sound / Title				
	P.Size		Zoom / Size				
	Dual/I/II		Audio / Lang I/II				
	Guide		Guide / EPG / -/--				
	Subt		Subtitle / EQ				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

