



 










 





 

 














Original	Rechange
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Mute	 Mute
 CH List	 List
 Menu	 Menu

Original	Rechange
 Guide	 Guide
 Tools	 Options
 Smart Hub	 Smart
 Info	 Info
 Return	 Back
 Exit	 Exit
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Social Tv	 Media
 3D	 3D





Original		Rechange	
	P.Size		Format
	AD/Subt.		Subt
	Search		TV/R
	E-Manual		D. Menu
	Play		Play
	Rec		Rec
	Stop		Stop
	Pause		Pause
	<</ <<		<<
	>>/>>		>>
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Original		Rechange	

