 

 

 

 



 

 

 

 

 

 

 



 





 

 

 

 

 

 





 



 



 

 













 
 




 





Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Return	 Shift + Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 CH List	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE-CH	 Back / Return	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 PR+	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-





Original	Rechange
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 TTX/MIX	 Text / Goto
 Media.P	 Display / Media
 P.Size	 Zoom / Size
 Dual I-II	 Audio / Lang I/II
 AD	 Sound / Title
 Subt.	 Subtitle / EQ
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Rechange

