

 

 
 
 
 

 
 


 
 


 

 


 







Original		Rechange		Original		Rechange	
	Power		Power		P+		Ch +
	Source		AV		P-		Ch -
	1		1		CH.List		List
	2		2		Smart Hub		Smart
	3		3		Menu		Menu
	4		4		Guide		Guide
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Vol+		Vol +		OK		Ok
	Vol-		Vol -		Red		Red
	Mute		Mute		Green		Green





Original		Rechange		Original		Rechange	
	Yellow		Yellow				
	Blue		Blue				
	Social Tv		Media				
	Search		TV/R				
	3D		3D				
	E-Manual		D. Menu				
	P.Size		Format				
	AD/Subt.		Subt				
	<</ <<		<<				
	Pause		Pause				
	>/>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

