




 






| Original | Rechange |
|--|---|
|  Standby/On |  Power |
|  Open/Close |  Eject |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 / << Shuttle |  4 |
|  5 |  5 |
|  6 / Shuttle >> |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 / Screen Fit |  0 |
|  Audio |  Dual |
|  Mode/Repeat |  Text |
|  Zoom/SVHS |  Shift + Eject |
|  3D Sound |  3D |
|  Clear |  Exit |

| Original | Rechange |
|---|---|
|  TV/VCR |  TV/R |
|  Clock/Counter |  Options |
|  Angle/A.TRK |  Pre Ch |
|  View to DVD |  Media |
|  View to VCR |  Smart |
|  Input Sel |  AV |
|  Digest/F.ADV/Step |  Format |
|  TRK Up |  Vol + |
|  TRK Down |  Vol - |
|  Prog+ |  Ch + |
|  Prog- |  Ch - |
|  Display |  Info |
|  << |  << |
|  << |  << |
|  Stop |  Stop |
|  Play |  Play |
|  Pause |  Pause |





| Original | | Rechange | | Original | Rechange |
|----------|----------------|----------|---------|----------|----------|
| | >> | | >> | | |
| | >> | | >> | | |
| | Rec | | Rec | | |
| | Disc Menu | | D. Menu | | |
| | Up | | Up | | |
| | Down | | Down | | |
| | Right | | Right | | |
| | Left | | Left | | |
| | Setup/Enter | | Ok | | |
| | Return/A.DUB | | Back | | |
| | Title/Speed | | Guide | | |
| | Subtitle/Timer | | Subt | | |
| | Mark/Index | | List | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

