

 
 

 

 


 









 

 
 

 


 


 




 

 

 





	Original	Rechange	Original	Rechange
	Power			Up
	Open/Close			Subtitle
	Repeat			Down
	Disc Menu			Left
	Video Sel			Audio
	>>			Right
	USB			Tools
	Marker			Enter
	<<			Title Menu
	Repeat A-B			
	Play/Pause			
	Stop			
	>>			
	<<			
	Menu			
	Return			
	Info	