
 











 










Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Up	 Up
 1	 1	 Return	 Back / Return
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Internet	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Shift + Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE CH	 Fav / Marker / PC	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 P +	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-

Original	Rechange	Original	Rechange
 Power	 Dimmer / Mute	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 OK	 RETURN	 BACK
 EXIT	 LIST	 SMART	
 CANCEL	 SMART	 MEDIA	 CH PAGE
 VOL+	 DISPLAY	 SEARCH	
 VOL-	 TV	 DVD	 CD - STB
 TV	 DVD	 TAPE	 TUNER
 1	 VIDEO	 4	 5
 2	 AUX - HDD	 6	 USB
 3	 7	 8	 BLUETOOTH
 4	 8	 9	 PC
 5	 HDMI - BAT	 0	 FAV MARKER
6	GUIDE EPG	NETFLIX	APP
7	NETFLIX	APP	YouTube
8	APP	YouTube	Prime Video
9	YouTube	Prime Video	
0	Prime Video		
FAV MARKER	SEARCH	REPEAT	REPEAT A-B
RANDOM	RANDOM		





Original		Recharge		Original		Recharge	
	Mute		Mute / Dimmer				
	P -		CH- / Page-				
	TTX/MIX		Text / Goto				
	Media P		Display / Media				
	Content		D.Menu / Top				
	CH LIST		Shift + Smart / List				
	AD		Audio / Lang I/II				
	SUBT		Subtitle / EQ				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

