



| Original | Rechange |
|----------|----------------------|
| Power | Power |
| Tv | TV/Radio / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Enter | OK |
| PRE-CH | Back / Return |
| CH LIST | Shift + Smart / List |
| FAV CH | Fav / Marker / PC |
| Tools | Setup / OPT / |

| Original | Rechange |
|----------|-----------------------------|
| Menu | Menu / Home |
| Return | Shift + Back / Return |
| Info | Info / Angle |
| Internet | Smart / List |
| Exit | Exit / Cancel / Clear |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| Red | Red / Netflix / Search |
| Enter | Shift + OK |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| Vol+ | Vol+ |
| Vol- | Vol- |
| Mute | Mute / Dimmer |



Tools

