





 

 

 




 





 



 











Original	Rechange
Power	Power
Function Tv	AV / Input / RDS
Eject	Eject / Surround
Sleep	Sleep / Timer
1/RDS Display	1
2	2
3/TA	3
4/PTY-	4
5/PTY Search	5
6/PTY+	6
7	7
8	8
9	9
PL II	Audio / Lang I/II
0	0
DSP/EQ	Subtitle / EQ
I<<	I<< / Preset-

Original	Rechange
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Vol+	Vol+
Mute	Mute / Dimmer
Tuning/CH+	Shift + >> /
Tuning/CH+	CH+ / Page+
Vol-	Vol-
Repeat	Shift + Green / APP /
Tuning/CH-	CH- / Page-
Tuning/CH-	Shift + << /
Disc Menu	D.Menu / Top
Menu	Menu / Home
Title Menu	Sound / Title





Original	Rechange
 Power	 Power
 Function Tv	 AV / Input / RDS
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow

Original	Rechange
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search



