



Original		Rechange		Original		Rechange	
	Power		Power		CH/P-		CH- / Page-
	1		1		[≡_]/Source		AV / Input / RDS
	2		2		[≡i]/Menu		Menu / Home
	3		3		[≡]/TTX/MIX		Text / Goto
	4		4		[≡?]/Info		Info / Angle
	5		5		Exit		Exit / Cancel / Clear
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter		OK
	-/--/+100		Guide / EPG / -/--		Red/Auto		Red / Netflix / Search
	[≡o]		Sleep / Timer		Green/M/B/P.Mod		Green / APP / Repeat
	Mute		Mute / Dimmer		Yellow/P.Size		Yellow / YouTube / Repeat
	Vol+		Vol+		Blue/Still		Blue / Prime Video / Random
	Vol-		Vol-		[≡+]/PIP		Picture / Format
	CH/P+		CH+ / Page+		- J /S.Mode		Setup / OPT /





Original	Recharge	Original	Recharge
I-II/Dual/MTS	Audio / Lang I/II		
PRE-CH	Back / Return		
[=◇]/Source	Display / Media		
[=◇]/Size	Zoom / Size		
[□]/Position	Subtitle / EQ		
Magic-CH	Smart / List		

