







 

 

 



 



 


 
 



 



 



 









 

 


















 


 





Original	Rechange	Original	Rechange
 Power	 Power	 P-	 CH- / Page-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Menu	 Menu / Home
 3	 3	 TV	 TV/Radio /
 4	 4	 Info/[=?]	 Info / Angle
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 OK
 -/--/[=+]	 Guide / EPG / -/--	 TTX/MIX	 Text / Goto
 PRE-CH	 Back / Return	 Dual I-II/[=O]	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Sleep/[=◇]	 Smart / List
 Vol+	 Vol+	 [=◇]	 Picture / Format
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 P+	 CH+ / Page+	 Green	 Green / APP / Repeat

Original	Rechange	Original	Rechange
 Power	 Power	 P-	 CH- / Page-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Menu	 Menu / Home
 3	 3	 TV	 TV/Radio /
 4	 4	 Info/[=?]	 Info / Angle
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 OK
 -/--/[=+]	 Guide / EPG / -/--	 TTX/MIX	 Text / Goto
 PRE-CH	 Back / Return	 Dual I-II/[=O]	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Sleep/[=◇]	 Smart / List
 Vol+	 Vol+	 [=◇]	 Picture / Format
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 P+	 CH+ / Page+	 Green	 Green / APP / Repeat





Original	Recharge	Original	Recharge
 Yellow/S.Mode	 Yellow / YouTube / Repeat		
 Blue/-[/]-	 Blue / Prime Video / Random		

