


 


 


 
 
 


 




 
 





 





 


 






 
 
 

 


 

 
 

 





 



 



 

 

 

 




Original	Rechange	Original	Rechange
 Power	 Power	 Sound	 Dual
 VCR	 Smart	 Setup / Menu	 Menu
 DVD	 Media	 Up / CH+	 Up
 DVD Open / Close	 Eject	 Up / CH+	 Ch +
 1	 1	 Down / CH-	 Down
 2	 2	 Down / CH-	 Ch -
 3	 3	 Right / Tracking+	 Right
 4	 4	 Left / Tracking-	 Left
 5	 5	 Enter	 Ok
 6	 6	 Bass Boost	 Shift + Ch +
 7	 7	 Surround	 List
 8	 8	 Pause	 Pause
 9	 9	 Play	 Play
 0	 0	 Stop	 Stop
 Return	 Back	 << / Preset-	 <<
 Volume-	 Vol -	 >> / Preset+	 >>
 Volume+	 Vol +	 I<< / Tune-	 I<<

Original	Rechange	Original	Rechange
 Sound	 Dual	 Setup / Menu	 Menu
 Up / CH+	 Up	 Up / CH+	 Ch +
 Down / CH-	 Down	 Down / CH-	 Ch -
 Right / Tracking+	 Right	 Left / Tracking-	 Left
 Enter	 Ok	 Bass Boost	 Shift + Ch +
 Surround	 List	 Pause	 Pause
 Play	 Play	 Stop	 Stop
 << / Preset-	 <<	 >> / Preset+	 >>
 I<< / Tune-	 I<<		





Original	Recharge	Original	Recharge
>>I / Tune+	>>I		Jump
Display	Info		Top Menu
Audio Out	Options		Audio
Input	AV		Play Mode
Timer Rec	Red		A-B Repeat
Zero Return	Green		Subtitle
Counter Reset	Yellow		Marker
Clock / Counter	Blue		DVD Menu
Rec / OTR	Rec		
Tape Speed	3D		
AM/FM	Shift + TV/R		
TV/VCR	TV/R		
Clear / Cancel	Exit		
Slow	Shift + Pause		
Program	Sleep		
Angle	Format		
Zoom	Shift + Eject		
			Guide
			Shift + Menu
			Shift + Dual
			Shift + Play
			Text
			Subt
			Pre Ch
			D. Menu

Original	Recharge	Original	Recharge
	Guide		Shift + Menu
	Shift + Dual		Shift + Play
	Text		Subt
	Pre Ch		D. Menu

