











 


 
 












 













 
















 









Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Pic.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Rechange
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat



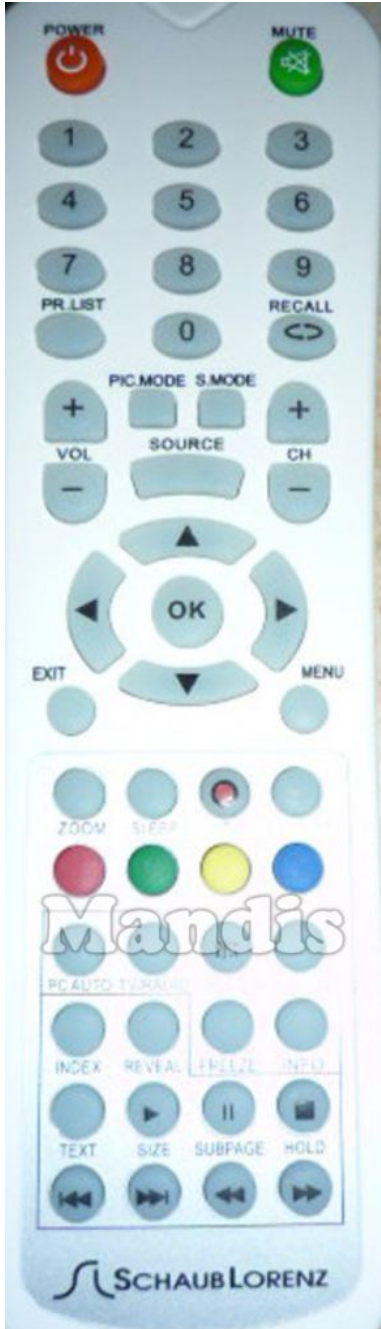

Original	Recharge
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
PC Auto	Eject / Surround
Tv/Radio	TV/Radio /
I/II/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Index	Display / Media
Reveal	Shift + Back / Return
Freeze	Shift + Pause / Step /
Info	Info / Angle
Text	Text / Goto
Play/Size	Play / Slow
Pause/Subpage	Pause / Step / Freeze
Stop/Hold	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-

Original	Recharge
>>	>> / Tune+

