


 









 
 


 

 








 
 

 
 

 
 

 


 




Original		Rechange		Original		Rechange	
	Power		Power		Green / Sub		Subt
	Mute		Mute		Yellow		Yellow
	1		1		Blue		Blue
	2		2		Vol-		Vol -
	3		3		Vol+		Vol +
	4		4		Info		Info
	5		5		Exit		Exit
	6		6		EPG		Guide
	7		7		Smart		Smart
	8		8		File		Media
	9		9		Menu		Menu
	0		0		Up		Up
	TV / Radio		TV/R		Left		Left
	Last		Back		OK		Ok
	Red / Audio		Red		Right		Right
	Red / Audio		Dual		Down		Down
	Green / Sub		Green		TTX		Text





	Original	Recharge	Original	Recharge
	OPT	 Options		
	<<	 <<		
	>>	 >>		
	Play	 Play		
	Stop	 Stop		
	Rec	 Rec		
	Pause	 Pause		
	F1	 Shift + 1		
	F2	 Shift + 2		

