







 



 



 



 







 



 

 

 



 


 






 


 










 







Original	Rechange	Original	Rechange
 Power	 Power	 Vol +	 Vol+
 Mute	 Mute / Dimmer	 MTS	 Audio / Lang I/II
 1	 1	 CH +	 CH+ / Page+
 2	 2	 Vol -	 Vol-
 3	 3	 REC List	 Smart / List
 4	 4	 CH -	 CH- / Page-
 5	 5	 FAV List	 Fav / Marker / PC
 6	 6	 REC	 Rec / Rec Mode
 7	 7	 Freeze	 Pause / Step / Freeze
 8	 8	 Menu	 Menu / Home
 9	 9	 Up	 Up
 DTV / ATV	 D.Menu / Top	 Source	 AV / Input / RDS
 0	 0	 Left	 Left
 Recall	 Back / Return	 Enter	 OK
 P.Mode	 Picture / Format	 Right	 Right
 S.Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer	 Down	 Down



