



Original	Recharge
On/Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide
Repeat	Text
Open/Close	Eject
Memory	Back
Clear	Exit
Clock/Timer	Shift + AV

Original	Recharge
Sleep	Sleep
Bass/Treble	Dual
X-Bass	Subt
Random	Media
I<<<</Tuning	I<<
>>>>/Tuning	>>I
Preset Up	Up
Preset Down	Down
Enter	Ok
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Folder	Smart
Demo/Dimmer	3D
CD	Yellow
USB	Blue
Tuner/Dab	Green





	Original	Recharge	
AUDIO/LINE INPUT	Input/Audio Line	TIMER AV	AV
iPod	iPod	A	Red
DISPLAY (TV OUT)	(Tv Out)/Display	SEARCH TV/R	TV/R
MENU	Menu	TOP MENU MENU	Menu
▶/▢	Play/Pause	PLAY MODE ▶	Play
DISPLAY	Display CD/USB	DISPLAY INFO	Info
▢	Stop CD/USB	▢	Stop
▶/▢	Play/Pause	⏸	Pause
ASPM	ASPM RDS	PICTURE FORMAT	Format
PTY	PTY RDS	FAV PRE-CH	Pre Ch
DISPLAY	Display RDS	SHIFT + DISPLAY INFO	Shift + Info
SCAN	Scan DAB	◀	Left
ENTER	Enter DAB	SHIFT + OK	Shift + Ok
DISPLAY	Display DAB	▶	Right

Original	Recharge

