 
 

 





Original	Recharge
 On / Stand-By	 Power
 Clear / Dimmer	 Yellow
 Memory	 Green
 Disc Select 1	 Shift + 1
 Disc Select 2	 Shift + 2
 Disc Select 3	 Shift + 3
 Disc Select 4	 Shift + 4
 Disc Select 5	 Shift + 5
 CD	 Smart
 Tuner (Band)	 Media
 Video / AUX / USB	 Shift + Smart
 CD Random	 Red
 CD Pause	 TV/R
 USB Pause	 Shift + Pause
 CD Pause	 Pause
 CD Stop	 Format
 CD Stop	 Stop

Original	Recharge
 CD Play	 Sleep
 CD Play	 Play
 USB Stop	 Shift + Stop
 USB Play	 Shift + Play
 Tuning +	 Shift + Up
 Tuning +	 Up
 Tuning -	 Shift + Down
 Tuning -	 Down
 >>I / >> / Preset Up	 >>
 >>I / >> / Preset Up	 >>I
 >>I / >> / Preset Up	 Right
 I<< / << / Preset Down	 <<
 I<< / << / Preset Down	 I<<
 I<< / << / Preset Down	 Left
 Display	 Info
 Folder	 Ok
 Clock / Timer	 AV





	Original		Recharge	
	RDS ASPM		+	Shift + 7
	RDS PTY		+	Shift + 8
	RDS Display		+	Shift + 9
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	+10			Guide
	Equalizer Mode			Dual
	X-Bass / Demo			Subt
	Volume -			Vol -

	Original		Recharge	
	Volume +			Vol +

