








 


 
 



 


 
 

 

 





 

 
 



 

 
 
 
 
 

 

 

 
 
 
 
 
 
 


 


 









Original		Recharge		Original		Recharge	
	Power		Power		Source		AV
	AV Mode		Shift + AV		P+		Ch +
	Radio		TV/R		P-		Ch -
	TruSurround		List		Vol+		Vol +
	OPC		Media		Vol-		Vol -
	DTV		Smart		Mute		Mute
	1		1		[<>]		Format
	2		2		▼/O)/I/II/I+II		Dual
	3		3		[i+]		Info
	4		4		Sleep		Sleep
	5		5		EPG		Guide
	6		6		ESG		Options
	7		7		DTV Menu		D. Menu
	8		8		[≡]		Text
	9		9		Menu		Menu
	0		0		End		Exit
	Recall		Pre Ch		Return		Back





Original	Recharge
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
[≡?]	3D
[≡+]	Eject
[...]	Subt
[≡o]	Shift + 3D
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Original	Recharge

