



| Original | Recharge |
|-------------|---------------|
| Standby | Shift + Power |
| On | Power |
| Computer | 1 |
| S-Video | 2 |
| Video | 3 |
| Break Timer | Sleep |
| Freeze | Stop |
| AV Mute | Mute |
| Magnify+ | Smart |
| Magnify- | Media |
| Page Up | Ch + |
| Page Down | Ch - |
| Vol+ | Vol + |
| Vol- | Vol - |
| Pointer | D. Menu |
| Spot | Info |
| Up | Up |

| Original | Recharge |
|----------------------|----------|
| Left | Left |
| Enter | Ok |
| Right | Right |
| Down | Down |
| Effect / Left Click | Exit |
| Return / Right Click | Back |
| Keystone | Subt |
| Picture Mode | Format |
| Menu/Help | Menu |
| Auto/Sync | Options |
| Eco+Quiet | 3D |
| Resize | Eject |

