





| Original | Rechange | Original | Rechange |
|--|---|--|---|
|  Operate |  Power |  Show View |  Info / Angle |
|  Open / Close |  Eject / Surround |  TV / DVD |  TV/Radio / |
|  1 |  1 |  Timer On / Off |  Sleep / Timer |
|  2 |  2 |  Time Shift |  Text / Goto |
|  3 |  3 |  Dubbing |  Vol- |
|  CH + |  CH+ / Page+ |  P in P |  Picture / Format |
|  4 |  4 |  Input |  AV / Input / RDS |
|  5 |  5 |  HDD |  Shift + 7 |
|  6 |  6 |  Start Menu |  Menu / Home |
|  CH - |  CH- / Page- |  DVD |  Shift + 2 |
|  7 |  7 |  Rec List / DVD Top Menu |  Smart / List |
|  8 |  8 |  Up |  Up |
|  9 |  9 |  Original / Playlist / DVD Menu |  D.Menu / Top |
|  Direct |  Setup / OPT / |  Left |  Left |
|  -/-- |  Guide / EPG / -/-- |  Set / Enter |  OK |
|  0 |  0 |  Right |  Right |
|  C / Erase |  Shift + Exit / Cancel / Clear |  Exit |  Exit / Cancel / Clear |



