













 


 



 









 



 
 
 



 
 



 


 


 
 

 

 


 











Original	Recharge	Original	Recharge
 Power On	 Power	 Stop	 Stop
 Standby	 Shift + Power	 </Pause	 Pause
 Input	 AV	 >> /Preset+	 >>
 Mute	 Mute	  <</Preset-	  <<
 Vol Up	 Shift + Right	 >>/Tune+	 >>
 Vol Down	 Shift + Left	 <</Tune-	 <<
 Volume+	 Vol +	 Setup/Home	 Media
 Volume-	 Vol -	 Test/Disc Menu	 Menu
 T/CH Level	 Smart	 Dimmer/Return	 Back
 CH/Album Up	 Ch +	 Display	 Info
 CH/Album Down	 Ch -	 RDM/Room2	 Exit
 Up	 Up	 Audio	 Options
 Down/Search	 Down	 Surround/Play List >	 Green
 Sel >	 Right	 < Surround/Play List	 Red
 < Sel	 Left	 Stereo/Play M	 TV/R
 Enter	 Ok	 1 / Tuner	 1
 Play	 Play	 2 / CD	 2







 
 



 


 














 



 

 
 
 

 
 


 
 


 

 
	Original	Recharge		Recharge
F.AUX 3	3 / F.Aux	<b>3</b>		3
TAPE 4	4 / Tape	<b>4</b>		4
BT IN 5	5 / BT In	<b>5</b>		5
VIDEO 1 6	6 / Video 1	<b>6</b>		6
VIDEO 2 7	7 / Video 2	<b>7</b>		7
VIDEO 3 8	8 / Video 3	<b>8</b>		8
9	9	<b>9</b>		9
0	0	<b>0</b>		0
+10	10	<b>GUIDE</b>		Guide
EXT.IN	Ext In	<b>D</b>		Blue
SLEEP	Sleep	<b>PROG SLEEP</b>		Sleep
AVR	AVR	<b>SHIFT + 1</b>		Shift + 1
RECALL DOCK	Dock	<b>SHIFT + 2</b>		Shift + 2
SELECT CD	CD	<b>SHIFT + 3</b>		Shift + 3
AUX	AUX	<b>SHIFT + 4</b>		Shift + 4
BD	BD	<b>SHIFT + 5</b>		Shift + 5
TV	TV	<b>SHIFT + 6</b>		Shift + 6

	Original	Recharge		Recharge
SAT	SAT	<b>SHIFT + 7</b>		Shift + 7
CBL	CBL	<b>SHIFT + 8</b>		Shift + 8











 








 









 

 
 





	Original	Recharge	Original	Recharge
	Power On			Audio
	Standby			Subtitle
	Up			1
	Down			2
	Right			3
	Left			4
	Enter			5
	Setup/Home			6
	Test/Disc Menu			7
	Play			8
	Stop			9
	>>			0
	<<			
	I<<			
	>>I			
	Display			
	Dimmer/Return			





	Original	Recharge	Original	Recharge
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0







Original		Recharge		Original		Recharge	
	Power On		Power		Audio		Options
	Standby	 + 	Shift + Power		< Surround/Play List		Red
	RDM/Room2		Exit		Surround/Play List >		Green
	CH/Album Up		Ch +		Stereo/Play M		TV/R
	CH/Album Down		Ch -		Sleep / Dock M.		Sleep
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	<<		<<				
	I<<		I<<				
	>>I		>>I				
	Test/Disc Menu		Menu				
	Display		Info				
	Enter		Ok				
	Up		Up				
	Down		Down				

