




Original		Rechange		Original		Rechange	
	Power		Power		DTV		Smart
	Mute		Mute		Source		AV
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Freeze		Shift + Pause
	9		9		Media		Media
	0		0		Rec		Rec
	List		List		Vol+		Vol +
	Back		Back		Vol-		Vol -
	Nicam		D. Menu		CH+		Ch +
	Aspect		Format		CH-		Ch -
	Sleep		Sleep		P.Mode		Shift + Format





Original	Rechange
S.Mode	+ Shift + Dual
Play/Pause	Play
Stop	Stop
Play/Pause	Pause
<< / Index	<<
>> / Size	>>
I<< / Reveal	I<<
>>I / Subpage	>>I
Text	Text
Hold	+ Shift + Stop
EPG	Guide
Subtitle	Subt
Info	Info
FAV	Pre Ch
Audio	Dual
TV / Radio	TV/R
Red	Red

Original	Rechange
Green	Green
Yellow	Yellow
Cyan	Blue

