




 
 

 
 
 





 
 



 


 
 


 
 


 
 
 
 

 

 
 
 
 
 

 



 

 
 
 

 
 




 
 

 

 





Original		Rechange		Original		Rechange	
	Standby		Power		Down		Down
	PVR Rec		Rec		Right		Right
	PVR List		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Tv/Radio		TV/R		7		7
	Favourite		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back







 

 
 
 





 

 


 
 

 
 

 
 
 
 
 

 

 
 
 
 
 
 




 
 

 
 
 

 
 

 
 
 




	Original	Rechange	Original	Rechange
	Goto	3D		
	<<	<<		
	>>	>>		
	1<<	1<<		
	>>1	>>1		
	Play	Play		
	Pause	Pause		
	Stop	Stop		
	RPT	Media		
	Red	A Red		
	Green	B Green		
	Yellow	C Yellow		
	Blue	D Blue		





Original		Recharge		Original		Recharge	
	Standby		Power		Down		Down
	PVR Rec		Rec		Right		Right
	PVR List		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Tv/Radio		TV/R		7		7
	Favourite		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back





Original		Rechange		Original		Rechange	
	Goto		3D				
	<<		<<				
	>>		>>				
	l<<		l<<				
	>>l		>>l				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	RPT		Media				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

