




Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	Info		Info / Angle		Time Shift		Sleep / Timer
	Angle		Shift + Info / Angle		0		0
	Copy		Picture / Format		Goto		Shift + Text /
	Zoom		Zoom / Size		Rec		Rec / Rec Mode
	Tv Sys		Smart / List		Stop		Stop / Hold
	Music		Sound / Title		Subtitle		Subtitle / EQ
	Setup		Setup / OPT /		Audio		Audio / Lang I/II
	Menu		Menu / Home		>>/FF		>> / Tune+
	1		1		<</FR		<< / Tune-
	2		2		A-B		Shift + Yellow / YouTube /
	3		3		Repeat		Shift + Green / APP /
	4		4		>>I/Next		>>I / Preset+
	5		5		Vol+		Vol+
	6		6		Play/Pause		Play / Slow
	7		7		Vol-		Vol-





Original	Recharge	Original	Recharge
 I<</Prev	 I<< / Preset-		
 Home	 D.Menu / Top		
 Up	 Up		
 X/Return	 Back / Return		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Select	 Fav / Marker / PC		
 Down	 Down		
 Confirm	 Display / Media		
 Red	 Red / Netflix / Search		
 Green/EPG	 Guide / EPG / -/--		
 Green/EPG	 Green / APP / Repeat		
 Yellow/TTX	 Yellow / YouTube / Repeat		
 Yellow/TTX	 Text / Goto		
 Blue	 Blue / Prime Video / Random		

