

 


 







 




 













 





 
 








	Original	Recharge	Original	Recharge
	Power			I<</Prev
	Repeat			I>>/Next
	Tv Vol+			<</<I
	Tv Vol-			>>/>I
	Audio			Scan/Slow
	SUR			Enter
	Subtitle			Up
	Angle			Down
	Clear			Right
	Menu			Left
	Top Menu			Shuffle
	Display			
	Return			
	Play			
	Pause			
	Stop			
	Replay	