

 






 
 






 




 






 


 





 
 
 
 
 

 




Original	Recharge	Original	Recharge
 Power	 Power	 Tools	 Options
 Source	 AV	 Mute	 Mute
 [+]	 D. Menu	 Vol+	 Vol +
 [> <]	 Format	 Vol-	 Vol -
 A/B	 Pre Ch	 Prog+	 Ch +
 EPG [I]	 Shift + Options	 Prog-	 Ch -
 [i+]	 Info	 Text	 Text
 Red	 Red	 Back	 Back
 Green	 Green	 0	 0
 Yellow	 Yellow	 1	 1
 Blue	 Blue	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4
 Right	 Right	 5	 5
 Left	 Left	 6	 6
 Menu	 Menu	 7	 7
 Return	 Shift + Back	 8	 8





Original		Recharge		Original		Recharge	
	9		9				
	Digital		TV/R				
	Analog		List				
	OK		Ok				

