

 





























Original	Recharge
Speakers TV Audio Bravia Sync	Shift + Sound / Title
Power AV Bravia Sync	Shift + Power
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
♥ Fav / Marker / PC	Fav / Marker / PC
[≡] Text / Goto	Text / Goto
0	0
Enter	Guide / EPG / -/--
Red	Red / Netflix / Search

Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Sound Mode	Sound / Title
I<</Preset-	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I/Preset+	>>I / Preset+













 





 
 


Original	Rechange
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 [...]	 Subtitle / EQ
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Display	 Display / Media
 O)))	 Audio / Lang I/II
 Vol-	 Vol-
 Prog-	 CH- / Page-
 Sleep	 Sleep / Timer

Original	Rechange





Original	Rechange
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ♥	 Fav / Marker / PC
 0	 0
 Enter	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Smart / List
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options/Tools	 Setup / OPT /
 Function	 Info / Angle
 Home/Menu	 Menu / Home
 Sound Mode	 Sound / Title
 I<</Preset-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I/Preset+	 >>I / Preset+



 





 



 

 





















 
 



 



 

 

 



 




 




Original	Rechange	Original	Rechange
<</Tuning-	<< / Tune-		
Play	Play / Slow		
>>/Tuning+	>> / Tune+		
[...]	Subtitle / EQ		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
Mute	Mute / Dimmer		
Vol+	Vol+		
Display	Display / Media		
O)))	Audio / Lang I/II		
Vol-	Vol-		
Sleep	Sleep / Timer		







Original	Rechange
 Speakers TV Audio Bravia Sync	 Sound / Title
 Power AV Bravia Sync	 Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Fav / Marker / PC	 Fav / Marker / PC
 Text / Goto	 Text / Goto
 0	 0
 Red / Netflix / Search	 Red / Netflix / Search
 Green / APP / Repeat	 Green / APP / Repeat

Original	Rechange
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Top Menu / D.Menu / Top	 Top Menu / D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return / Back / Return	 Return / Back / Return
 Down	 Down
 Home / Menu / Menu / Home	 Home / Menu / Menu / Home
 Subtitle / EQ	 Subtitle / EQ
 Mute / Dimmer	 Mute / Dimmer
 Vol+	 Vol+
 CH+ / Page+	 CH+ / Page+
 Display / Media	 Display / Media
 Vol-	 Vol-
 CH- / Page-	 CH- / Page-





Original	Recharge
 Sleep	 Sleep / Timer

Original	Recharge

