





 



 




 












 

 



 
 
 

 
 
 

 

 

 






 


















Original	Rechange	Original	Rechange
 Power	 Power	 Options	 Setup / OPT /
 [+]	 Picture / Format	 Up	 Up
 [i+]	 Info / Angle	 Down	 Down
 <</<l	 << / Tune-	 Right	 Right
 Play Bravia Sync	 Play / Slow	 Left	 Left
 Pause Bravia	 Pause / Step / Freeze	 OK	 OK
 >>/l>	 >> / Tune+	 Home	 Menu / Home
 Sync Menu Bravia Sync	 D.Menu / Top	 Red	 Red / Netflix / Search
 Stop Bravia Sync	 Stop / Hold	 Green	 Green / APP / Repeat
 Theatre Bravia	 TV/Radio /	 Yellow	 Yellow / YouTube / Repeat
 Digital	 Display / Media	 Blue	 Blue / Prime Video / Random
 Analog	 Smart / List	 1	 1
 [...]	 Subtitle / EQ	 2	 2
 Audio	 Audio / Lang I/II	 3	 3
 Guide	 Guide / EPG / -/-	 4	 4
 Source	 AV / Input / RDS	 5	 5
 Return	 Back / Return	 6	 6





	Original	Recharge		Original	Recharge
	7		7		
	8		8		
	9		9		
	0		0		
	Text		Text / Goto		
	FAV	+	Shift + Fav / Marker / PC		
	Vol+		Vol+		
	Vol-		Vol-		
	Mute		Mute / Dimmer		
	Prog+		CH+ / Page+		
	Prog-		CH- / Page-		
	Back		Fav / Marker / PC		

	Original	Recharge

